


3. Operation Instruction

! IMPORTANT To get the best performance from your dishwasher, read all operating instructions before using it for the first time.

Control Panel

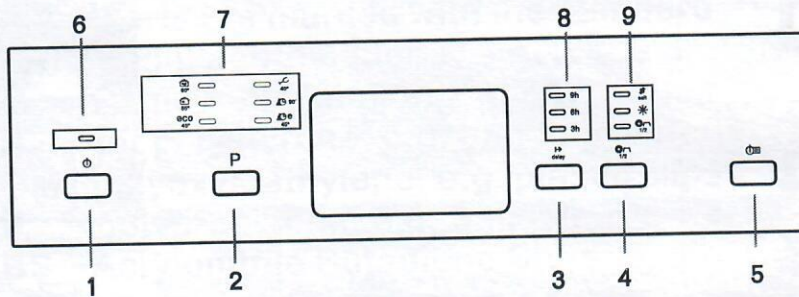



1. On/Off Button: To turn on/off the power supply.
2. Program Button: To Press the button to select a wash Program.
3. Delay Button: To Press the button to delay.
4. Half load functions Button: To select Half load functions.
5. Start /Pause button: To start the selected washing program or pause the washing program when the machine is working..

6. Power indicator: To show when the power on.
7. Program indicators: to show which program you have chose.
8. Delay indicators: to show the delay time (3h/6h/9h).
9. Half load/salt warning indicators/Rinse Aid indicator: When you choose Half load, the Half load indicator light; When the salt warning light, the salt container must only be refilled; When rinse aid light, the dispenser needs to be refilled. *

Dishwasher Features

Front view

Back View

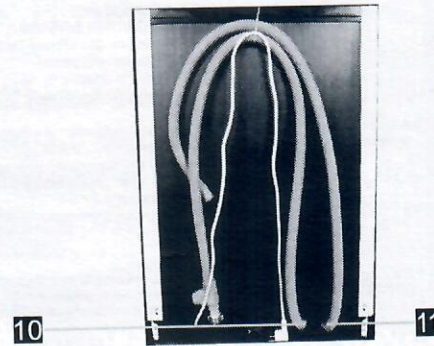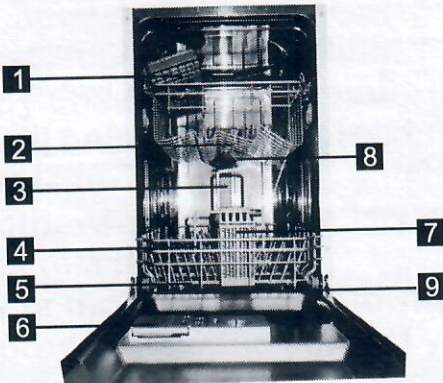






- | | | | |
|-----------------------|-------------------------|--------------------------|--------------------------------|
| 1 Cup shelf | 4 Lower basket | 7 Cutlery rack | 10 Inlet pipe connector |
| 2 Upper basket | 5 Salt container | 8 Spray arms | 11 Drain pipe |
| 3 Inner pipe | 6 Dispenser | 9 Filter assembly | |

6. Starting a washing program

Wash Cycle Table

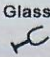! NOTE: (★) Means: need to fill rinse into the Rinse-Aid Dispenser.

| Program | Cycle Selection Information | Description of Cycle | Detergent pre/main | Running time(mln) | Energy (Kwh) | Water Rinse (L) | Rinse Aid |
|---|--|--|--------------------|-------------------|--------------|-----------------|-----------|
| Intensive  60° | For heaviest soiled crockery, and normally soiled pots, pans, dishes etc with dried on soiling. | Prewash (50°C) Wash (60°C) Rinse Rinse (70°C) Drying | 3/22g | 165 | 1.4 | 16.5 | ★ |
| Normal  55° | For normally soiled loads, such as pots, plates, glasses and lightly soiled pans. | Prewash(45°C) Wash (55°C) Rinse Rinse (65°C) Drying | 3/22g | 175 | 1.1 | 13 | ★ |
| eco 45° ECO (*EN 5 042) | This is standard programme, it is suitable to clean normally soiled tableware and it is the most efficient programme in terms of its combined energy and water consumption for that type of tableware. | Prewash Wash (45°C) Rinse(65°C) Drying | 3/22g | 190 | 0.74 | 9 | ★ |
| Glass  40° | For lightly soiled crockery and glass | Pre-wash wash(40°C) Rinse Rinse(60°C) Drying | 3/22g | 125 | 0.75 | 13.5 | ★ |
|  90° 90 Min | For lightly soiled loads that do not need excellent drying efficiency. | Wash(65°C) Rinse Rinse (65°C) Drying | 25g | 90 | 1.15 | 11.5 | ★ |
|  45° Rapid | A shorter wash for lightly soiled loads and quick wash. | Wash (45°C) Rinse(50°C) Rinse (55°C) | 20g | 30 | 0.7 | 10 | ★ |

! NOTE:

*EN 50242 : This program is the test cycle. The information for comparability test in accordance with EN 50242, as follows:

- Capacity: 10 setting
- Position Upper basket: upper wheels on rails
- Rinse aid setting: 6
- PI:0.49W; PO:0.45W.

Turning On the Appliance

Starting a cycle wash

- 1 Draw out the lower and upper basket, load the dishes and push them back.
It is commended to load the lower basket first, then the upper one (see the section entitled "Loading the Dishwasher").
- 2 Pour in the detergent (see the section entitled "Salt, Detergent and Rinse Aid").
- 3 Insert the plug into the socket. The power supply is 220-240 VAC / 50 HZ, the specification of the socket is 10A 250VAC. Make sure that the water supply is turned on to full pressure.
- 4 Close the door, press the On/Off button to switch on the machine.
- 5 Press the program button, the wash program will be changed as follows direction:
Intensive->Normal->ECO->Glass->90 Min->Rapid;
If a program is selected, the response light will light on. Then press the Start/Pause button, the dishwasher begins to start.